

Cassese cartridges can be re-filled quickly and simply using either Cassese Uni wedges, or other branded Universal wedges that have been designed for Cassese underpinners.

Follow the simple procedure below:

1



- Image shows a near empty cartridge.
- We strongly advise reloading at this point.

2



- Pull apart the sides of the cartridge and carefully remove the white plastic wedge pusher.

3




- Plastic wedge pusher partially removed.

4



- Plastic wedge pusher shown alongside the cartridge.

5

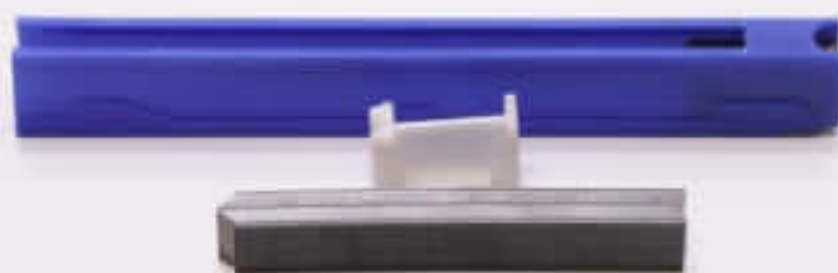

- Note the direction of the wedges with the glue side facing down.

6



- Slide the wedges into the cartridge as shown.

7



- Top view to show the direction of the loaded wedges.

8



- Re-insert the white plastic wedge pusher as shown.

9



- The cartridge is now ready to use!

LARSON · JUHL

If your usual cartridges are not currently available ask a member of our Customer Service or your Account Manager for one of our available alternatives or search our site www.larsonjuhl.com